

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

1 Turn on the appliance

- Close the dishwasher door, press the on/off button. Power indicator will be on.

2 Dispense detergent

- Press the latch to open the detergent dispenser.
- Add detergent to the dispenser.

3 Check the special salt level

- Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

4 Load the dishes

- Remove food leftovers from the dishes
- Place the dishes in the baskets according to loading guidelines.
- It is recommended to load the lower basket first, then the upper basket.

5 Select the wash programme

- Press the button to select the desired program, the corresponding indicator will light up.

6 Start your dishwasher

- Close the dishwasher door.
- The dishwasher will start a wash programme.

7 Turn off the appliance



- Turn the appliance off using the On/Off button.

8 Remove dishes from the appliance

- When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.





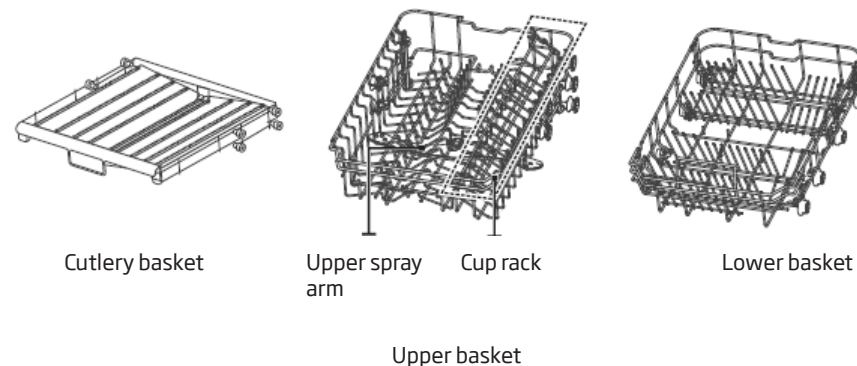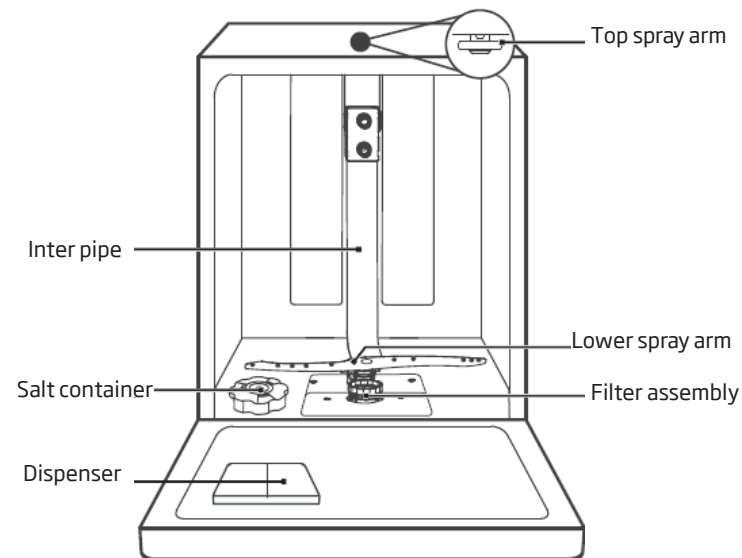



9 Features and components

- Spray arms
- Cutlery basket
- Upper basket
- Inner tube
- Lower basket
- Salt container
- Detergent dispenser
- Mugs and cups shelves
- Main filter
- Water supply hose connection
- Water drain hose
- Regulator



NOTE: Figures are for illustrative purposes only Individual models may vary.

TABLE OF WASH PROGRAMMES: DFM46C8EOiBH / MV 438 DCB / DFM46C8EOiBD / DFM46C8EOiID / MV 438 ABB B / DFM46C8EOiWD

ITEM	Programme name	The default temperature [°C]	Type of soil	Amount of detergent	Type of cycle						Duration [min.] *	Power consumption [kWh] *	Water consumption [litres] *
1	Auto 	45-55°	For lightly, normally or heavily soiled crockery with or without dried-on food.	4g/14g	Pre-wash 45°C	Autowash 45-55°C	Rinse	Rinse 60°C	Dry		80-150	0.79-1.510	9.8-13.1
2	Intensive 	65°	Heavily soiled dishes with dried food residue.	4g/14g	Pre-wash 50°C	Wash 65°C	Rinse	Rinse	Rinse 60°C	Dry	205	1.010	14.7
3	Hygiene 	70°	With the Sanitize option selected, the water temperature is increased to 70 °C for high temperature sanitization.	18g	Wash 70°C	Rinse	Rinse	Rinse 70°C	Dry		200	1.440	11.3
4	**ECO 	50°	Lightly soiled glass-ware and porcelain.	4g/14g	Wash 50°C	Rinse	Rinse 45°C	Dry			208	0.593	8.0
5	Glass 	50°	For lightly soiled crockery and glass.	4g/14g	Pre-wash	Wash 50°C	Rinse	Rinse 50°C	Dry		120	0.910	11.2
6	58' 	60°	For normally soiled loads that need quick wash.	18g	Wash 60°C	Rinse	Rinse 50°C	Dry			58	1.010	12.1
7	Tub-clean 	70°	For cleaning of the dishwasher itself.	4g/14g	Pre-wash	Wash 70°C	Rinse	Rinse 55°C	Dry		145	1.197	13.2
8	Rapid 	30°	Short rinse for slightly soiled dishes without drying.	12g	Wash 45°C	Rinse 45°C					30	0.810	9.9

** Standard programme This is a reference program for research institutes. Tests according to EN 60436.
This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.