

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

1 Turn on the appliance

- Switch the machine on by pressing On / Off button. When machine is on, "--" will be shown on the Display (3).

2 Dispense detergent

- Press the latch to open the detergent dispenser.
- Add detergent to the dispenser.

3 Check the special salt level

- Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

4 Load the dishes

- Remove food leftovers from the dishes
- Place the dishes in the baskets according to loading guidelines.
- It is recommended to load the lower basket first, then the upper basket.

5 Select the wash programme

- Select a suitable programme for your dishes by pressing Program Selection button. The programme will start automatically when the door is closed.

6 Start your dishwasher


- Close the dishwasher door.
- The dishwasher will start a wash programme.

7 Turn off the appliance

- Turn the appliance off using the On/Off button.

8 Remove dishes from the appliance

- When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.

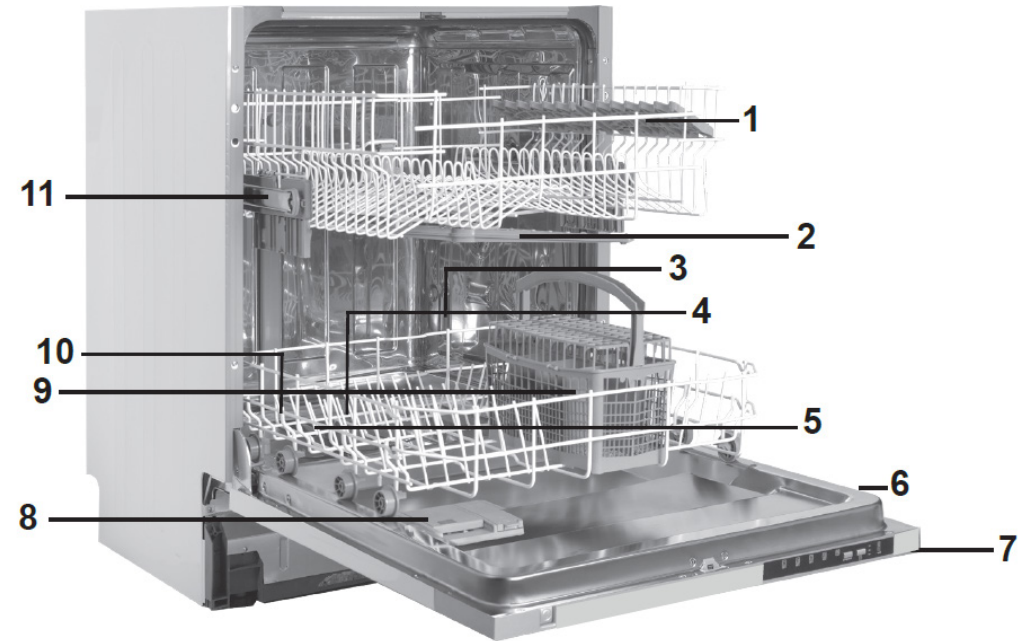







1. Upper basket with racks
2. Upper spray arm
3. Lower basket
4. Lower spray arm
5. Filters
6. Rating plate
7. Control panel
8. Detergent and rinse-aid dispenser
9. Cutlery basket
10. Salt dispenser
11. Upper basket track latch
12. Mini Drying Unit: This system enhances the drying performance of your dishes.



NOTE:
Figures are for illustrative purposes only Individual models may vary.

TABLE OF WASH PROGRAMMES: DIV62E6a STUDIO

ITEM	Programme name	The default temperature [°C]	Type of soil	Soil level	Amount of detergent	Duration [min.] *	Power consumption [kWh] *	Water consumption [litres] *	
1	**ECO 	45°	Standard program for normally soiled daily using dishes with reduced energy and water consumptions.	Medium	25cm/3	03:25	0.937	12.0	
2	Intensive 	65°	Suitable for heavily soiled dishes.	Heavy	25cm/3	01:57	1.700	17.2	
3	Hygiene 	70°	Suitable for heavily soiled dishes requiring hygienic washing.	Heavy	25cm/3	02:07	1.900	16.0	
4	Super 50' 	50°	Suitable for normally soiled daily dishes with faster program.	Medium	25cm/3	00:50	1.100	12.0	
5	Quick 30' 	30°	Suitable for lightly soiled dishes and quick wash.	Light	25cm/3	00:30	0.740	12.4	
6	Pre-wash 	--	Suitable to rinse dishes that you plan to wash later.	Light	--	00:15	0.020	4.5	

** Standard programme This is a reference program for research institutes. Tests according to EN 60436. This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.